 
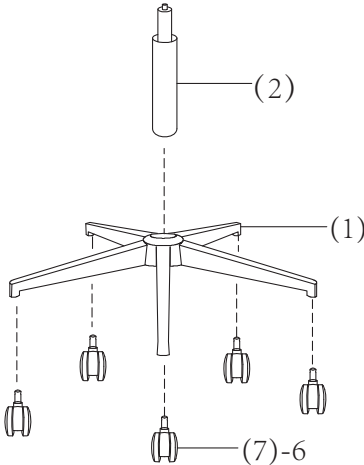
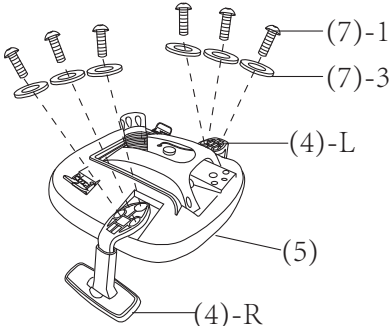
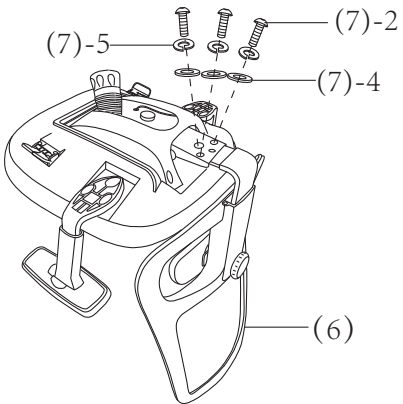



Assembling Instruction

(1)Base	(2)Gas Column	(3)Headrest																												
																														
(4)Armrest	(5)Seat	(6)Back																												
																														
(7)<table><tr><td>1.</td><td></td><td>x6</td><td>(6x45) mm</td></tr><tr><td>2.</td><td></td><td>x3</td><td>(8x20) mm</td></tr><tr><td>3.</td><td></td><td>x6</td><td>(6x13) mm</td></tr><tr><td>4.</td><td></td><td>x3</td><td>(8x20) mm</td></tr><tr><td>5.</td><td></td><td>x3</td><td>8mm</td></tr><tr><td>6.</td><td></td><td>x5</td><td></td></tr><tr><td>7.</td><td></td><td>x1</td><td>5mm</td></tr></table>			1.		x6	(6x45) mm	2.		x3	(8x20) mm	3.		x6	(6x13) mm	4.		x3	(8x20) mm	5.		x3	8mm	6.		x5		7.		x1	5mm
1.		x6	(6x45) mm																											
2.		x3	(8x20) mm																											
3.		x6	(6x13) mm																											
4.		x3	(8x20) mm																											
5.		x3	8mm																											
6.		x5																												
7.		x1	5mm																											

A

B

C

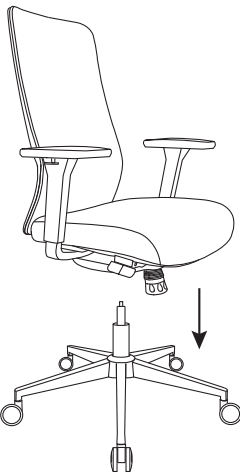D

E Tighten the headrest screw after aligning the headrest clasp to the backrest groove.